

#### LO.T1-2-4WCV

Dispositivo a rollingcode operante a 433.92MHz, fino ad un massimo di 4 tasti di trasmissione.


#### Caratteristiche tecniche

Alimentazione 1 batteria a 12V alcalina  
Consumo in trasmissione 18mA  
Codici disponibili 18 miliardi di miliardi  
Numero canali 1 - 2 - 4  
Antenna incorporata  
Tipo di oscillatore SAW  
Temperatura di esercizio (-20 ÷ 70) °C

#### Come memorizzare un trasmettitore

Questo è il tasto nascosto per l'apprendimento a distanza dei trasmettitori (abilitato con il programmatore **LO.PROG** o **LO.PM**).

1) Premere per circa 1 secondo il tasto nascosto di un trasmettitore che è già stato appreso pre-

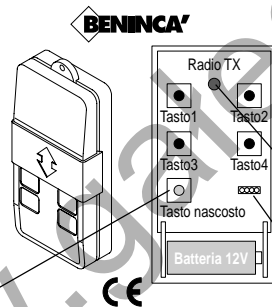

denemente.

2) Premere per circa 2 secondi il tasto del trasmettitore che si vuole apprendere.

**Attenzione:** l'apprendimento a distanza non è consigliato se sono presenti nelle immediate vicinanze 2 o più ricevitori comandati dallo stesso trasmettitore (esempio: il tasto 1 appreso al primo ricevitore e il tasto 2 al secondo) in quanto l'apprendimento può essere simultaneo.

Il led del trasmettitore si accende stabilmente durante la trasmissione del codice. Se la batteria del trasmettitore è scarica, il led lampeggia durante la trasmissione: **sostituire la batteria**.

Connettore per la programmazione del trasmettitore (da utilizzare solo con il programmatore **LO.PROG** o **LO.PM**).

LS542007 - Rev. 03/01/00

**LO.T1-2-4WCV**

Rollingcode unit operating at 433.92MHz, up to 4 transmission keys maximum.

**Technical specifications**


Power supply 12V battery, alkaline  
Consumption 18mA during transmission  
Codes available 18 billion billions  
No. of channels 1 - 2 - 4  
Antenna built-in  
Type of oscillator SAW  
Operating temperature (-20 ÷ 70) °C

**How to store a transmitter code**

This is the hidden key for the remote learning of transmitters (enabled with the programmer **LO.PROG** or **LO.PM**).

1) Press for about 1 second the hidden key of a transmitter that has already been stored in

**BENINCA**

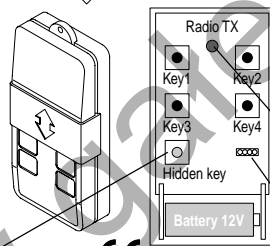

memory  
2) Press for about 2 seconds the key of the transmitter to be stored in memory.

**Warning:** the remote learning is not advisable if 2 or more receivers controlled by the same transmitter are near (e.g. key 1 stored in the first receiver and key 2 in the second), as the learning may result simultaneous.

The Transmitter LED switches on with fixed light during the code transmission.  
If the transmitter battery is low, the LED flashes during the transmission: **replace the battery**.

Connector for the programming of the transmitter (to be used only with the programmer **LO.PROG** or **LO.PM**).

LS542007 - Rev. 03/01/00